

Since 1968

COMMAX
SmartHome & Security

User Manual

VIDEO PHONE CAMERA DRC-40BS/40CS



www.commax.com

COMMAX Co.,Ltd



- Thank you for purchasing COMMAX products.
- Please carefully read this User's Guide (in particular, precautions for safety) before using a product and follow instructions to use a product exactly.
- The company is not responsible for any safety accidents caused by abnormal operation of the product.



Contents

1. Introduction	3
2. Important Safeguard	4
3. Part Names.....	4
4. Wiring and Installation	5
5. Package contents	7
6. Specification	7



1. Introduction

Your unit is designed so it can be flush mounted on the or used. When flush mounted on the wall, the stand permits you to the unit for an gular of unit view. The model number is located on the bottom and record the serial number in the space provided below(available). Refer to these numbers whenever you call upon your COMMAX dealer regarding this product.

Model No.

Serial No.

To prevent fire or shock hazard, do not expose the unit to rain or moisture.



This symbol is intended to alert the use to the presence of uninsulated **"dangerous Voltage"** within the product' s enclose that may be of sufficient magnitude to constitute a risk of electric shock to persons.



This symbol is intended to alert the use to the presence of important operating and maintenance(servicing) instructions in the literature accompanying the appliance



caution

Rosk of electric shock
do not open



CAUTION: To reduce the risk of electrix shick, do not remove cover(or back) no user-serviceable part sinside refer servicing to quared service personnel

 


2. Important Safeguard

- ▲ **Damage Requiring Service:** This equipment from the power source and source and refer servicing to qualified service personnel under the following conditions:
 - Ⓐ when the power is damaged.
 - Ⓑ if liquid has been spilled or objects have fallen into the unit
 - Ⓒ if the equipment has been exposed to rain or water.
 - Ⓓ if the equipment has been dropped or otherwise damaged.
 - Ⓔ when the equipment exhibits a distinct change in performance- this indicates a need for service.
- ▲ **Water and Moisture:** Do not use this product near water, for example, near a bath tub, wash bowl, kitchen sink, or laundry tub, in a wet basement, or near a swimming pool, and the like.
- ▲ **Accessories:** The product may fall, causing serious injury to a child or adult, and serious damage to the appliance. Any mounting of the manufacturer's instructions, and should use a mounting accessory recommended by the manufacturer.
- ▲ **Object and Liquid Entry:** Never push objects of any kind into this product through openings as they may touch dangerous voltage points or short-out parts that could result in a fire or electric shock. Never spill liquid of any kind on the product.
- ▲ **Lightning:** For added protection for this product before a lightning storm, or when it is left unattached and un used for long periods of time, unplug it from the wall outlet and disconnect the other system. This will prevent damage to the product due to lightning and power-line surges. If you live in an area heavily prone to lightning storms, it is recommended that you invest in power-line, telephone-line, RF cable and actuator/ polarization surge protectors to protect your appliance system from possible damage



3. Part Names.

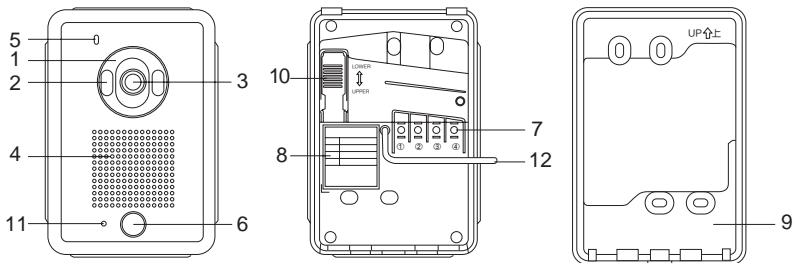


1. Protection shield.
2. Lamp at night
3. C.C.D Camera Lens
4. Speaker
5. MIC.
6. Call button.


7. Monitor Connection terminal.
8. Description Label.
9. Bracket mounting a wall
10. Angle adjustment lever.
11. Power lamp : When talking with a monitor, it is on.
12. Door Release connection terminal



 4. Wiring and Installation

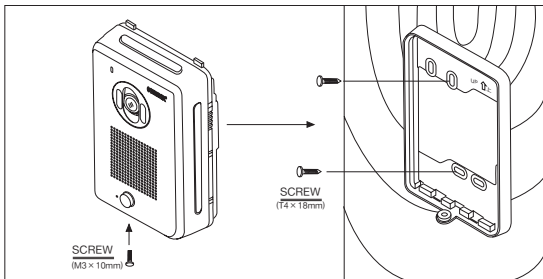


 1. Fix a bracket to wall with screws (M3 x 10mm) supplied.
2. Please fix the desired angle of a lens with angle adjustment lever before fixing it.
3. Put a camera unit into a bracket.
4. Recheck the desired position of a camera unit to be installed through the image of a monitor.

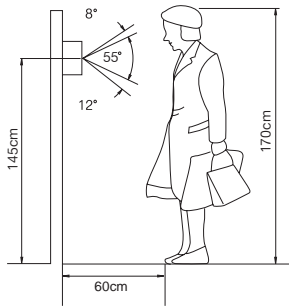

A Monitor

 A door camera unit





5. Package contents

1. SCREW : T4X18mm 2EA, M3X10mm 1EA
2. Manual



6. Specification

Spec. \ Model	DRC-40BS	DRC-40CS
Pick Up Device	B/W C.C.D 1/3"	COLOR C.C.D 1/4"
Wiring (House/Door Release)	4 wires in Polarity / 2 wires in NonPolarity	
Related voltage	12V $\overline{\text{---}}$ (from a monitor)	
Conversation Method	Simultaneous Conversation	
Video Transmission Standard	EIA or CCIR	NTSC or PAL
Angle Adjustment	H : 68° V : 50°	H : 68° V : 50°
Min. Illumination	0 LUX(300mm from Camera)	
Temperature	-10°C ~ +40°C	
Dimension	99.5(W)×141.5(H)×37(D)mm	
weight	300g	



Memo

COMMAX

COMMAX Co.,Ltd.

513-11, Sangdaewon-dong, Jungwon-gu, Seongnam-si, Gyeonggi-do, Korea
Int'l Business Dept. : Tel.; +82-31-7393-540~550 Fax.; +82-31-745-2133
Web site : www.commax.com

PM1040BS0010

Printed In Korea / 2011.09.105